

The P146 Interface allows the P137/8 Pager to connect to external alarm systems such as telephone diallers, bells, lights and nurse call systems. In addition it allows connection to a computer via a USB interface, over which all the functionality and node data can be saved or restored. It also allows the P137 to log live alarm data to the computer.



Lugs for Wall mounting

USB Connector:



Upgrade pager firmware
Upload/Download Alarm Node Information
Upload/Download Alarm Statistics
Send live Alarm Status (P137 only)

12v power input

Charges P137/8 while in holster
Provides power to external equipment

External Equipment Interface:

Relay output (NO & NC) operated on alarm
+12v power feed

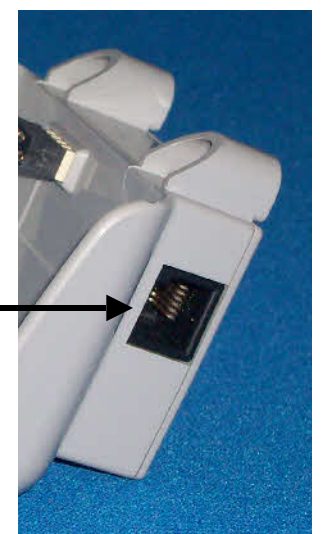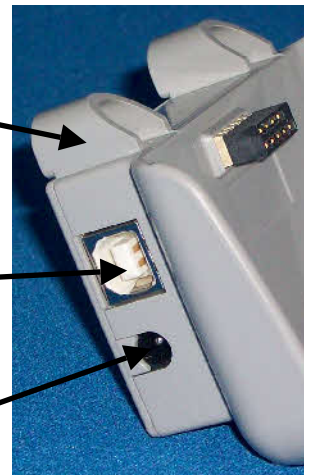

Alert-it Care Alarms are social aids designed and manufactured in accordance with 93/42/EEC as Class 1 Medical Devices. They are intended to improve, but not replace, the vigilance of carers to distressing side-effects of various diseases, such as Epilepsy and Dementia. They do not monitor vital physiological processes and should not be expected to diagnose any disease or predict the onset of any symptoms.